tor en la posición "OFF". 8. Para apagar el aparato, ponga el interrupdesbnés de aproximadamente un minuto. 7. El aparato empezará a producir vapor que el aparato está encendido. 6. El interruptor se alumbrará, lo que indica 5. Encienda el aparato (ON).

4. Enchufe el cordón en un tomacorriente. este recta. completamente extendido y que la manguera

3. Asegúrese que el soporte telescópico esté mente conectada. 2. Asegürese que la manguera este debida-

(OFF). 1. Asegúrese que el aparato esté apagado FUNCIONAMIENTO DEL APARATO

# **IMPORTANT SAFETY INSTRUCTIONS**

When using electrical appliances, especially when children are present, basic safety precautions should always be taken. including the following:

# READ ALL INSTRUCTIONS **BEFORE USING**

**DANGER** — Any appliance is electrically live even when the switch is off.

- To reduce the risk of death by electric shock: 1. Always unplug appliance immediately after using.
- 2. Do not place or store appliance where it can fall or be pulled into a tub or sink. 3. Do not place in, or drop into water or
- other liquids. 4. If an appliance falls into water, unplug it
- immediately. Do not reach into the water.
- **WARNING** To reduce the risk of burns, electrocution, fire, or injury to persons: 1. This appliance should never be left unattended when plugged in.
- 2. This appliance should not be used by, on or near children or individuals with certain disabilities. Unsupervised use could result in fire or personal injury.
- 3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

CALIENTE. **NO LLENE EL DEPOSITO CON AGUA** .o(it naia

depósito en la base, y compruebe que está tapa sobre el deposito y volteelo. Coloque el sobrellene el deposito. Vuelva a instalar la to con agua tria, hasta el nivel deseado. No tapa en el centro de la base. Llene el depósindolo por el asa, y voltéelo. Desentornille la Retire el depósito de agua de la base, cogié-

#### (OTARAYA 13 RATOBNOO 30 SETNA) LLENADO DEL DEPOSITO

de volver a llenario. Véase las instrucciones rro, puede que sea necesario impiario antes qebosito se ha almacenado con agua adeninterno y compruebe que está bien fijo. Si el cionando. Ponga el depósito en el depósito durarse que la válvula y el resorte estén fun-Voltee el depósito e inspecciónelo para ase-

# **EL DEPOSITO DE AGUA** ANTES DE LLENAR

# DE OPERACION INSTRUCCIONES


4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. Do not attempt to repair the appliance. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used. Return the appliance to an authorized service center

for examination and repair. 5. Keep the cord away from heated surfaces. Do not allow cord to contact heated surfaces. Do not pull or twist cord. Let appliance

- 6. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- 7. Never drop or insert any object into any opening or hose.

cool completely before putting away.

- 8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- 9. Do not use an extension cord to operate
- 10. Surfaces of this appliance may be hot when in use. Do not let heated surfaces touch eyes or skin.
- 11. Do not place the steam nozzle directly on any surface or on the appliance power cord while it is hot or plugged in. Use the stand provided.
- 12. Unplug this appliance before filling or emptying. Do not overfill.

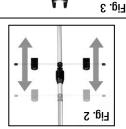

binzas del gancho. usar las pinzas interiores, solo utilice las

los pantalones son demasiado largos para en las pinzas (Fig. 3) y desarrúguelo. Nota: Si soborte telescopico (Fig.2). Cuelgue el pantalon aflojando la arandela que se encuentra en el pinzas interiores segun io iargo dei pantaion, rugado más rápido y efectivo. Alce o baje las los pantalones, lo que permite lograr un desarsiziewa de pinzas moviles para colgar y estirar Fate desarrugador de prendas incluye un

# SISTEMA PARA COLGAR LOS PANTALONES

сио у дігеіа Zimplemente cuelque la percha en el ganmayor comodidad, el gancho gira 360°.

13. While emitting steam, this appliance may cause burns if it is used too close to the skin, scalp or eyes, or if it is used incorrectly. To reduce the risk of contact with hot water discharging from steam vents, test appliance before each use by holding it away from body. 14. Do not operate steamer without properly filling the water tank.

- 15. Always keep the hose and nozzle elevated above the water tank.
- 16. Never yank cord to disconnect from outlet. Instead, grasp plug and pull to disconnect.
- 17. Burns could occur from touching hot metal parts, hot water, or steam. Use care when removing water tank or when you turn a steam appliance upside down – there may be hot water in reservoir.
- 18. To reduce likelihood of circuit overload. do not operate another high-wattage appliance on the same circuit.
- 19. If an extension cord is absolutely necessary, a 15 ampere rated cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or
- 20. Always remove the water tank from the appliance before filling it with water.
- 21. When changing attachments, please be sure the unit is off and no steam is being released in order to avoid contact with hot 22. Use caution when changing attachments.
- as they may contain hot water from condensation. Ensure the attachments are dry or cooled off, to avoid contact with hot water.

sobre el soporte telescópico (Fig.1). Para instalar la percha, encájela firmemente das, para desarrugarlas sin estuerzo. Para La percha giratoria permite colgar las pren-PERCHA GIRATORIA

La función de pausa le permitirá interrumpir

el aparato. el cyollo de vapor temporalmente, sin apagar

ASUA9

Fig. 1

. . . .





**OPERACION BASICA** entonces en el soporte. (Fig. 4)

de usarla, se relajará. La boquilla encajará manguera este rigida ai principio. **Despues** la boquilla sobre el gancho. Puede que la Extienda el soporte telescópico e instale





sednusa sutes de encender el aparato. is. Asegurese que todas ias conexiones esten pase y girela en sentido horario para sujetar-Fucaje la extremidad de la manguera en la Asegurese que el aparato este apagado. PASO 2 - Conexión de la manguera

# **SAVE THESE INSTRUCTIONS**

### FOR HOUSEHOLD USE ONLY UNPACKING INSTRUCTIONS

Place the box on a large, sturdy flat surface. Carefully remove the appliance from the packing material. Keep all plastic bags away from children.

STEAMER **ASSEMBLY** STEP 1 - Attaching the Telescopic

**Pole and Rotating** Hanger Insert the bottom of the larger metal telescopic pole into the holder on the unit base and screw the set screw until tight. (Caution: Do not over-tighten.) Then attach pieces as shown in Fig. 1.



### STEP 2 - Attaching the Steamer Hose Be sure the unit is off. Insert angled end of

hose into steamer housing and twist clockwise to securely lock hose onto housing. (Be sure both connections at ends of hose are correct before operating appliance.)





indica en la figura 1.

es unôes seured sei

nesbnes' eusampie

apriete demasiado.

Precaucion: No 10

metal para sujetarlo.

apriete ei tornillo de

pase del aparato y

telescópico en la

inserte la parte

giratoria

- r 02A9

interior del soporte

co à de la percha

-idooseiei eliodos

tuera del alcance de los ninos.

de embalaje. Mantenga las bolsas de plástico

llana y segura. Retire el aparato del material

Ponga la caja sobre una superficie espaciosa,

SOLAMENTE

PARA USO DOMESTICO

**INSTRUCCIONES** 

**SATS3 30RAUD** 

Ensamblado del

**ENSAMBLADO** 

DESEMPACADO

Extend the telescopic pole and hang the steam nozzle from the rotating handle. Hose may be stiff upon removal from box. **Hose** will relax after initial use. Handle will sit properly on pole support once hose is relaxed. (Fig. 4)

**TURNING THE STEAMER ON** The steamer has three settings:








The pause feature allows you to stop the unit from steaming if you need to step away from the unit for awhile, without actually turning the steamer off.

## **USING ROTATING HANGER**

This unit comes with a rotating hanger. To use the hanger, simply place on top of

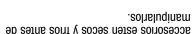

bnesto dne podrian estar calientes o con-22. Cambie los accesorios con cuidado, DISK 10S ACCESOR10S.

21. Asegúrese que el aparato este apagado y oase antes de lienario.


20. Siempre retire el depósito de agua de la tropezar con ella.

sion de manera que nadie la pueda Jalar o calentar excesivamente. Coloque la exten-Una extensión de menor amperaje podría

pole firmly (Fig. 1). It is now in place to rotate 360°. Hang your garment and steam away wrinkles. Turn as you wish.

### **USING PANT CLIP SYSTEM**

This fabric steamer is equipped with a pant clip system for holding pants taut for faster and more effective steaming. The bottom clips can be adjusted by loosening the knob (on the telescopic pole) and moving the pole up and down, depending upon the length of pants (see Fig. 2). Clip pants as shown in Fig. 3 and steam. Please note some pants may be too long to use the bottom clips. If that is the case, just simply use the top clips and let your pants hang freely.

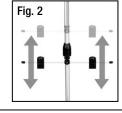



bruebe el vapor lejos de su cuerpo antes de ojos. Para reducir el riesgo de quemadura,

.soureindiuem tener agua caliente. Asegurese que los del cable electrico. Utilice el soporte incluido.

dne uo este emitiendo vapor antes de cam-

**OPERATING** INSTRUCTIONS

### **BEFORE FILLING** THE WATER TANK

sión, utilice una extensión de 15 amperios.

19. Si debe usar el aparato con una exten-

couecte otro aparato de alta potencia en el

18. Para evitar una sobrecarga eléctrica, no

o al voltear el aparato, puesto que el depósi-

jeuda cuidado al vaciar el deposito de agua

csliente y el vapor pueden causar heridas.

17. Las partes de metal calientes, el agua

16. Nunca jale el cable para desconectar el

14. Nunca opere el aparato con el depósito

contacto con la piel, el cuero cabelludo o los

callente. Siga las instrucciones de uso ai pie

13. El vapor que sale de la boquilla es muy

deposito de agua. No sobreliene el deposito.

12. Desenchufe el aparato antes de llenar el

aparato esté conectado. Manténgala alejada

11. No colodue la boquilla en ninguna super-

los olos y la piel alejados de las superficies

verse muy caliente durante el uso. Mantenga

10. La superficie de este aparato puede vol-

9. No utilice una extensión con este aparato.

ticie mientras este caliente o mientras el

de la letra y no permita que el vapor haga

wanguera a un nivel más alto que el

15. Siempre mantenga la boquilla y la

aparato. Agárrelo por la clavija.

depósito.

de agua vacio.

rando oxigeno.

to interno puede contener agua callente.

mismo circuito eléctrico.

Turn the water tank upside down and inspect to make sure the valve and spring assembly are functioning. Place the tank in the reservoir and check that it is seated securely. If the tank has been stored with water inside. it may be necessary to remove the water and clean the tank. Follow the steps for care and cleaning.

### FILLING THE WATER TANK (PRIOR TO PLUGGING IN THE APPLIANCE)

Remove the water tank with the handle and turn upside down. Unscrew the valve in the center of the base. Fill tank by holding it under a source of running cold water until it is filled to the desired level. Do not overfill Screw the valve cap onto the water tank and return the tank to the upright position. Place the water tank onto the base and make certain it is seated properly in the reservoir. DO NOT FILL THE TANK WITH HOT WATER.

eu serosoi (spray) o donde se este administinncionar donde se estên usando productos 8. No lo utilice en exteriores, ni lo haga ninguna de las aberturas.

7. Nunca deje caer ni inserte un objeto en de seguridad.

cizta. No intente ir en contra de esta funcion completamente, comuniquese con un electritomacorriente, invièrtela. Si aún no entrara tomacorriente polarizado. Si no entrara en el se boqua enchutar de una sola manera en el ancha que otra). Como medida de seguridad, nus ciavija polarizada (una pata es mas 6. El cable de este aparato esta dotado de entrie completamente antes de guardarlo. retuerce el cordón. Permita que el aparato contacto con las partes calientes. No jale ni calientes. No permita que el cordón haga 5. Mantenga el cable alejado de superficies

reparación o ajuste. de servicio autorizado para su revision, heridas. Regrese el aparato a un centro los riesgos de incendio, electrocución y ias partes de manera incorrecta aumenta ntente reparar el aparato. El ensamblar hubiese caido o si estuviese danado. No de que hubiese funcionado mal o que se la clavija estuviesen dañados, después 4. No opere este aparato si el cordon o accesorios recomendados por el fabricante.

mente segun las instrucciones. Solo use bropósito para el cual fue diseñado y sola-3. Utilice este aparato unicamente con el

qe este aparato podria causar un incendio o alguna discapacidad. El uso sin supervision sopre o cerca de niños o personas con

## **OPERATING THE STEAMER**

- 1. Make sure the ON/OFF switch is in the OFF position.
- 2. Make sure all hose connections are secure and tight.
- 3. Make sure the telescopic pole is fully extended and the hose is not twisted or kinked.
- 4. Plug the steamer cord into a normal electrical outlet.
- 5. Turn the ON/OFF switch to the ON position. 6. The switch will light to indicate when
- power is on. 7. Steam will be produced from the nozzle in about one minute.
- 8. To turn the steamer off, turn the ON/OFF switch to the OFF position.

Este aparato no deberia ser usado por, mientras esté conectado.

1. Nunca deje el aparato desatendido

dio o neridas:

riesgo de quemaduras, electrocucion, incen-ADVERTENCIA – Para reducir el

inmediatamente. No toque el agua.

4. Si el aparato cayera al agua, desconèctelo agua u otro liquido. 3. No coloque el aparato ni lo deje caer al

bnega caer o ser empujado a una banera o 2. No colodue ni guarde este producto donde

atamente después de usarlo. Siempre desconecte el aparato inmedi-

Para reducir el riesgo de muerte o herida por


tado permanece bajo tensión, aunque esté PELIGRO - Cualquier aparato enchu-

# OJRAZU 30 SSTNA INSTRUCCIONES **LEA TODAS LAS**

eutre las cuales las siguientes: tomar precauciones básicas de seguridad, cisimente en la presencia de ninos, debe Siempre que use aparatos eléctricos, espe-

# **IMPORTANTES** SEGURIDAD MEDIDAS DE

### **GETTING TO KNOW** YOUR STEAMER

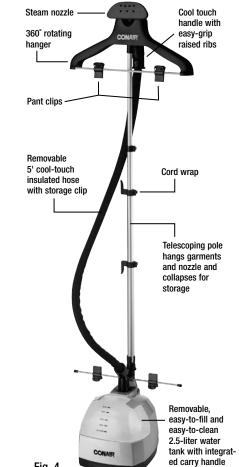

antes de usario. cuidadosamente lea las instrucciones skoducto, siempre olenamente de este y para disfrutar ara su seguridad osn əp

Instrucciones

**SOJ ATAM** 

PRENDAS DESARRIGADOR DE

TIWING TOO OTOBES

### **CLEANING AND STORING**

- I. Turn the ON/OFF switch to the OFF position and unplug from the power source. 2. Wait for the steamer to cool completely for
- at least 30 minutes. 3. Unplug power cord and retract it into the
- housing.
- 4. Remove the steamer hose.
- 5. Remove the water tank from unit, unscrew valve and empty unused contents. Allow to air dry.
- 6. Remove excess water from the reservoir by unscrewing the plug on the bottom of the steamer and letting the water drain out.
- 7. Collapse telescopic hanger rod.
- 8. Replace water tank.
- 9. Store the unit.



IB-10126 080211A901

> East Windsor, NJ 08520/Glendale, AZ 85307 ©2010 Conair Corporation

en www.conair.com Conair, Ilame al: 1-800-3-CONAIR o visítenos Para más información sobre los productos

> TOECS 1A , SIBBNSIE 7475 N. Glen Harbor Blvd. Service Department Conair Corporation Centro de servicio

visitenos en www.conair.com/registration Para registrar su producto,

derechos que varían de un Estado a otro. esbecilicos y usted puede tener otros Esta garantia le otorga derechos legales

regir para usted. las limitaciones mencionadas pueden no

**CAUTION:** Hose will be hot when in use. Avoid prolonged contact.

#### **OTHER IMPORTANT NOTES**

During operation, the steamer hose may gurgle. This is a normal result of condensation collecting inside the hose. Simply lift the handle upward until the hose is extended to its full height. The gurgling will disappear when the excess moisture inside the hose has had a chance to drain back into the



incidentales o consecuentes, de modo que exclusión o limitación de daños especiales, IMPLICITA. Algunos Estados no permiten la CUALQUIER OTRA GARANTIA, EXPRESA O **DEBIDO AL INCUMPLIMIENTO DE ESTA O** ESPECIAL, INCIDENTAL O CONSECUENTE EN NINGÚN CASO POR ALGÚN DAÑO CONAIR NO SERA RESPONSABLE

regir para usted. dne jas jimitaciones mencionadas pueden no

duración de una garantía implicita, de modo Estados no permiten limitaciones sobre la PRESENTE GARANTIA ESCRITA. Algunos LIMITADAS POR LOS 12 MESES DE LA UN PROPOSITO ESPECIFICO, ESTARAN COMERCIABILIDAD Y APTITUD PARA A LA GARANTIA IMPLICITA DE NCLUYENDO PERO NO LIMITADAS O RESPONSABILIDAD IMPLICITAS, CUALQUIER GARANTIA, OBLIGACION

será de 12 meses a partir de la fecha de recibo de compra, el periodo de garantia DIL INSTRUCCIONES DE ENVIO. EN AUSENCIA DEI deben Ilamar al 1-800-366-0937 para reciuecesitan dar una prueba de compra y y envio. Los residentes de California sólo postal de US\$3.00 por gastos de manejo an recibo de compra y un cheque o giro Servicio indicado a continuacion, Junto con garantia, regrese su aparato al Centro de Para obtener servicio técnico bajo esta

sentara defectos de materiales o fabricación. meses a partir de la fecha de compra si prean abarato ain cargo por un periodo de 12 Conair reparará o remplazará (a su opción) ONA NU 30 ADATIMIJ AITNARAĐ

#### **DECALCIFICATION**

If the appliance begins to produce steam more slowly than usual or stops producing steam and then starts again, you may need to decalcify your steamer. Decalcification refers to removing the calcium deposits that form over time on the metal parts of the steamer. For best performance from the Conair® Ultimate Fabric Steamer, decalcify the unit from time to time. The frequency depends upon the hardness of your tap water and how often you use the steamer.

To decalcify, use a solution of 1/3 white vinegar and 2/3 water in the water tank. Replace the water tank in the unit. Plug the unit into electrical outlet. Turn to the ON position and run until half the amount has steamed (1 liter). Turn the unit to the OFF position. unplug from electrical outlet, and allow to sit for 30 minutes. Remove water tank.

Remove excess water from the reservoir by unscrewing the plug at the bottom of the steamer and holding it over the sink. allowing the water to drain from the internal reservoir.

Repeat the above procedure as many times as necessary

until a normal steam rate returns, usually 2–3 times. With each repeated cycle, use a fresh solution of vinegar and water. Run one cycle of fresh, cold water through the unit at the completion of decalcification before using the unit again to steam garments.

depósito interno después de cada uso. remanente en el depósito de agua y el nu qesembeyo optimo, vacie el agua alto contenido en minerales. Para lograr NOTA: El agua de la llave puede tener un

> SOLUCION - Elimine el sarro CAUSA - Depósitos de sarro

• PROBLEMA - El aparato produce poco adna pale

SOLUCIÓN - Alce la manguera para que el CAUSA - Condensación en la manguera • PROBLEMA - La boquilla borbota

SOLUCIÓN - Alce la manguera para que ei CAUAA - Condensación en la manguera podnilla

• PROBLEMA - Gotas de agua salen de la qebosito

SOLUCION - Apague el aparato y llene el CAUSA - El nivel de agua está bajo PROBLEMA - El aparato no produce vapor

romacorriente SOLUCIÓN - Enchufe el cordón en un CAUSA - El aparato no está enchufado PROBLEMA - El aparato no calienta

RESOLUCIÓN DE PROBLEMAS

#### **HOW TO STEAM**

Grasp the handle of the steam nozzle with the steam jets facing away from you. Begin at the bottom of the fabric to allow the steam to rise inside and outside, removing wrinkles. Slowly move the nozzle from the bottom to the top of the fabric. Remove the nozzle from the garment and smooth the fabric with your free hand. Some fabrics are best steamed on the underside of the material. This will allow the fibers of the fabric to relax, eliminating wrinkles.

**NOTE:** Test fabric for color fastness in an inconspicuous spot. Drape linens, towels, handkerchiefs and napkins over a rod or place on a towel rack.

Heavier fabrics may require repeated steaming. Repeat as necessary.

With practice, you will gain speed and efficiency. You will soon learn which fabrics require multiple steam applications.

Do not directly touch velvet or silk with the steam head.

corfinas antes de desarrugarlas. ciones del tabricante. Vuelva a colgar las Lave y seque las cortinas según las instruc-

### CONSEJOS PARA DESARRUGAR CORTINAS

dnege completamente extendida. simplemente alce la manguera hasta que agua salga de la boquilla. Si esto ocurriera, manguera, haciendo que ésta gorgotee y que densación podría acumularse adentro de la Si la manguera no estuviera recta, con-

### para que la condensación baje hacia el Siempre sostenga la boquilla recta y alta,

No permita que la boquilla haga contacto qerà cual telas necesitan varias pasadas. was tacil y rapido cada vez y usted apren-Con práctica, desarrugar prendas se volverá

con seda o terciopelo.

una pasada. Repita cuantas veces sea nec-Las telas densas pueden necesitar más de

jeras y manteles si estan colgados en una le hará más tácil desarrugar toallas, servilde la tela antes de desarrugar la prenda. Se NOTA: Haga una prueba en un área discreta

eliminar las arrugas. dentro. Esto relaja las fibras, lo que ayuda a fejidos son más fáciles de desarrugar por la tela con la palma de su mano. Algunos fuera. Para terminar, aleje la boquilla y alise desde abajo hasta arriba, por dentro y por a la prenda. Mueva la boquilla lentamente Sostenga la boquilla con los orificios frente COMO DESARRUGAR PRENDAS

#### Always steam with hose in upright position, so any condensation is free to flow back into the steamer.

If you steam in a low position, condensation will collect inside the hose. This will cause gurgling and some water droplets to form near the steam jets on the handle. To avoid this, frequently lift the steam handle upward until the hose is extended to its full height.

#### TO STEAM DRAPES

Wash and dry drapes as directed, according to fabric type. Rehang drapes and steam when they are in place.

depósito de agua fresca. ındar prendas, repita estos pasos con un Antes de volver a usar el aparato para desarel vapor salga normalmente de la boquilla. vinagre, hasta que



cada vez una nueva 2 ó 3 veces, usando Repita estos pasos ma del tregadero. aparato al revés enciiə opuəluəlsos / qej qebosito qe adna rapa upicada debajo interno, abriendo la Vacie el depósito

mezcja de agua con

instalar el depósito de agua. dejelo entriar durante 30 minutos. Vuelva a Desbnes, apague y desconecte el aparato, y mitad del líquido (1 litro) se haya evaporado. Deje el aparato encendido hasta que la depósito en la base. Encienda el aparato. en el deposito de agua. Vuelva a colocar el planco con 2/3 de agua y vierta la mezcia Para eliminar el sarro: Mezcle 1/3 de vinagre

de uso del aparato. erà de la dureza del agua y de la frecuencia mente. La frecuencia de la limpieza dependpeño óptimo, deberá eliminarlos regularinternas del aparato. Para lograr un desembnegeu schwnjakse eu jas bartes metálicas rugador de prendas. Depósitos de sarro ser necesario eliminar el sarro de su desaro funciona de manera intermitente, puede Si nota que el aparato produce menos vapor ELIMINACIÓN DEL SARRO

#### TROUBLESHOOTING THE STEAMER

- PROBLEM Steamer fails to heat CAUSE - Steamer not plugged in SOLUTION - Plug into electrical outlet
- PROBLEM No steam CAUSE - Water level is low SOLUTION - Turn ON/OFF switch off and refill water tank
- PROBLEM Water drips from nozzle CAUSE - Condensation in hose SOLUTION - Hold the hose vertically and allow water to drain back into unit
- PROBLEM Nozzle gurgles CAUSE - Condensation in hose SOLUTION - Hold the hose vertically and allow water to drain back into unit
- PROBLEM Poor steam performance CAUSE - Sediment in tank SOLUTION - Decalcify reservoir and water tank

NOTE: Amounts of chemicals in water will vary in different areas. To ensure continued operation of the steamer, never store without cleaning and removing excess water from the reservoir and water tank.



qeusacion paje nacia ei deposito de agua. mente extendida. Esto permitirà que la conla manguera hasta que quede completamisma. Si esto ocurriera, simplemente alce acumulación de condensación adentro de la el uso. Esto es el resultado normal de la Puede que la manguera borbote durante **HIMPORTANTE** 

Evite tocarla. vuelve muy caliente durante el uso. PRECAUCION: La manguera se

### **LIMITED ONE-YEAR WARRANTY**

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES. INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WRITTEN, **LIMITED WARRANTY.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. EXPRESS OR IMPLIED, WHATSOEVER.

Some states do not allow the exclusion of limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.


This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.



9. Guarde el aparato. 8. Vuelva a instalar el depósito de agua. 7. Repliegue el soporte telescópico. para vaciar el depósito interno. 6. Retire la tapa debajo del depósito de agua nente. Permita que seque al aire libre. desentornille la tapa y tire el agua rema-5. Retire el depósito de agua de la base, 4. Desconecte la manguera. de la base.

3. Desenchute el cable y guardelo adentro minutos o mas. 2. Permita que el aparato enfríe durante 30 de limpiarlo.

Apague (OFF) y desconecte el aparato antes LIMPIEZA Y ALMACENAJE

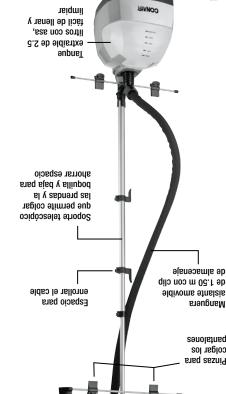

DESARRUGADOR DE PRENDAS FAMILIARICESE CON SU

earugag

cou andemicie

Mango aislante



read the instruction

book carefully

before using.

Please register this product at: www.conair.com/registration

Service Center Conair Corporation Service Department 7475 N. Glen Harbor Blvd. Glendale, AZ 85307

For information on any Conair product call: 1-800-3-CONAIR or visit us on the web at www.conair.com

©2010 Conair Corporation East Windsor, NJ 08520/Glendale, AZ 85307

10PA115080



IB-10126